



VANQUISH

EMPIRE MARKER SYSTEM

www.empirepaintball.com



TABLE OF CONTENTS

INTRODUCTION.....	3
RULES FOR SAFE MARKER HANDLING.....	4
QUICK SETUP.....	5
Super Freak Barrel.....	5
Vanquish Power On/Off.....	6
Tank Installation.....	6
Installing a Loader and Paintballs.....	7
Firing the Empire Vanquish.....	7
VANQUISH SETUP AND ADJUSTMENT.....	7
Battery Replacement and Life Indicator.....	7
Pressure and Velocity Adjustment.....	8
Trigger Adjustment.....	8
ELECTRONIC BOARD FUNCTIONS.....	9
Live Mode.....	9
Main Menu.....	10
Config Menu.....	10
System Menu.....	13
Tournament Lock.....	16
VANQUISH MENU TREE.....	17
VANQUISH PC SOFTWARE.....	19
Software Installation.....	19
Using the Vanquish USB Tool Software.....	20
Vanquish Boot Screen Editor Software.....	22
Vanquish PC Software Troubleshooting.....	22

GENERAL MAINTENANCE.....	23
External Cleaning.....	23
Barrel.....	23
Firing Engine Assembly.....	23
Maintenance of Firing Engine.....	24
Cleaning Eyes/Ball Detent.....	25
Trigger Maintenance.....	26
Regulator.....	26
SPLITTING THE BODY.....	26
TROUBLESHOOTING GUIDE.....	27
PART DESCRIPTION DIAGRAMS.....	29
Barrel.....	29
Feedneck.....	29
Firing Engine.....	30
Body.....	30
Grip Frame.....	31
Trigger.....	31
Foregrip.....	31
Regulator.....	32
WARRANTY INFO.....	33





⚠ WARNING!

This is not a toy. Misuse may cause serious injury or death. Eye protection designed specifically for paintball must be worn by the user and persons within range. Recommend 18 years of age or older to purchase. Persons under 18 years of age must have adult supervision.

READ THIS MANUAL BEFORE USING.

INTRODUCTION

Empire Paintball has created the finest paintball marker in the proud history of Empire products. The Vanquish is the pinnacle of intelligent marker design incorporating cutting edge technology within a proven marker platform.

Hardware Features

- Pressure balanced Spool Valve firing engine
- 5 way joystick navigation control
- Super bright 2000:1 contrast ratio 1" OLED Display, White on Black background
- Built in temperature compensated precision Pressure Transducer for on screen pressure read-out. No bulky external gauges or special pressure tester kit needed
- Blue Laser Breech Sensor System
- Low force trigger switch
- 2.7KHz Beeper to provide audio feedback
- Nano Watt XLP Flash microcontroller performing up to 16 MIPS (million instructions per second) provides highly accurate timing while not eating your battery
- Single tool for all maintenance
- Quick strip bolt
- Gas through grip frame
- Ambidextrous feedneck with adjustment
- ON/OFF ASA with Regulator
- Quick strip trigger

Software Features

- "Slick Assistant" lubricant monitoring system alerts you when you need to lube you gun
- 4C Eye compatible out of the box
- USB to PC enabled out of the box with no special accessories needed. Upgrade firmware, change settings, and make custom boot screens with the included PC software
- RF Upgradeable for seamless marker to loader communication
- Interrupt based firmware gives an ultra responsive feel when firing. Virtually no lag time between trigger pull and response time



- Super intuitive menu system that makes changing settings quick and easy
- 3 Customizable User Configurations to quickly and easily switch your style of play in seconds
- Training mode with Beeper feedback for users to practice their trigger speed without the need for air and paintballs
- User adjustable Anti-Bolt Stick settings makes first shot drop off a thing of the past
- Preset tournament firing modes to keep you legal at all major tournament series
- Customizable ramping and full-auto modes to max out your markers performance
- Resettable shot counter
- Screen display of calculated Average and Peak ROF's

Empire Vanquish Specifications

- Model: Empire Vanquish
- Barrel: Barrel: 14" or 16" Ported Aluminum Super Freak
- Caliber: .68
- Action: Electro-pneumatic
- Air Source: Compressed Air or Nitrogen (NoCO₂)
- Battery: One 9-Volt (Alkaline Only)
- Main Body Material: Aerospace 6061 Aluminum
- Weight: 25 ounces

INCLUDED WITH YOUR EMPIRE VANQUISH:

- Super Freak 8pc barrel kit with 14" & 16" tips and five bore sizes (.675, .680, .685, .690, .695)
- Neoprene Marker Carry Case
- 3/32" Hex Wrenches - Driver Handle, L-shaped
- Lubricant
- Empire Barrel Bag
- Empire Headband
- Bottle Opener/Key Chain
- Empire Stickers
- One 9-Volt Alkaline Battery
- Quick Start Manual
- Full Digital Manual on CD
- USB Cable



VANQUISH

EMPIRE MARKER SYSTEM



! WARNING! PAINTBALL GUNS AND PAINTBALL GUN ACCESSORIES ARE NOT TOYS!

- Careless use or misuse may result in serious bodily injury or death!
- Eye protection designed for paintball must be worn by the user and all persons within range.
- Not for sale to persons under 18 years of age.
- Must be 18 years of age or older to operate or handle any paintball gun and paintball gun accessories without adult or parental supervision.
- Read and understand all cautions, warnings, and operating manuals before using any paintball gun or paintball gun accessory.
- Do not aim paintball gun at eyes or head of people or at animals.
- Paintball guns are to be used with Paintballs only.
- To prevent fire or shock hazard, do not expose unit to rain or moisture.
- To prevent fire or shock hazard, do not immerse unit in liquids.
- To prevent fire or shock hazard, do not disassemble any electronic paintball device.
- The disposal of the battery used to power this product may be regulated in your area.
- Please conform to all local or state regulations with regard to battery disposal.
- Use common sense and have fun.

Any tampering with the unit voids your warranty. There are no consumer serviceable parts inside the unit. The use of non factory authorized components within this product may cause a critical failure, fire or shock hazard.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM ANY DEFECTIVE PRODUCT OR THE USE OF ANY PRODUCT.

WARNING: This product contains one or more chemicals that are known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash hands after handling.* You must be at least 18 years of age to purchase this product. This product may be mistaken for a firearm by law enforcement officers or others. Altering the color of the product or brandishing the product in public may be considered a crime.

Rules For Safe Marker Handling

IMPORTANT: Never carry your Empire Vanquish uncased when not on a playing field. The non-paintball public and law enforcement personnel may not be able to distinguish between a paintball marker and a firearm. For your own safety and for those in the area and to protect the image of the sport, always carry your Empire Vanquish in the marker case or a suitable container.

Safety and safe marker handling are the most important aspects of paintball sports. Please practice each of the following steps with an unloaded marker before attempting to operate your marker with an air source and paintballs. Read this entire manual before loading, or installing an air cylinder, or in any way attempting to operate the marker.

READ OWNER'S MANUAL BEFORE USING

- This is not a toy, use with caution.
- Treat every marker as if it were loaded.
- Never look down the barrel of a paintball marker.
- Keep your finger off the trigger until ready to shoot.
- Never point the marker at anything you don't wish to shoot, including fragile objects such

as windows.

- Keep the marker turned off until ready to shoot.
- Keep the barrel-blocking device in/on the marker's barrel when not shooting.
- Always remove paintballs and the air source before disassembly.
- After removing air source, point marker in safe direction and discharge until marker is confirmed as degassed.
- Store the marker unloaded and degassed in a secure place.
- Follow warnings listed on the air source for handling and storage
- Every person within range must wear eye, face, and ear protection designed specifically to stop paintballs and meeting ASTM standard F1776.
- Always measure your marker's velocity before playing paintball and never shoot at velocities in excess of 300 feet-per-second (91.44 meters).
- Remember that the ultimate safety device is you, the operator.

For manuals in other languages and warranty details, go to: paintballsolutions.com



QUICK SETUP


Empire Super Freak Barrel

The Empire Super Freak Barrel is included with the Empire Vanquish marker. The Super Freak is a three-piece barrel that consists of a front section (tip), a back section (back) and five sized, aluminum inserts. The inserts are used to match the size of the paintball to the barrel to create the most accurate and efficient barrel system available.

The threaded sections of the Super Freak have O-Rings to prevent the barrel from vibrating loose when fired. There are also two O-Rings within the barrel back to keep the insert from sliding out of the barrel. Replace and lubricate with Dow 33 grease as necessary.

SUPER FREAK ASSEMBLY

1. Insert the threaded end of the barrel tip into the open section of the barrel back.
2. Hold the barrel back and turn the barrel tip clockwise until it stops (Do not over tighten). Ensure the threads are engaged correctly and are not cross-threading which would damage the both the tip and the barrel back.
3. After the tip and back are merged, choose the desired insert size and install into the barrel back.
4. Push the insert all the way into the barrel back until it stops, if installed correctly, the insert should be flush with the back of the barrel.

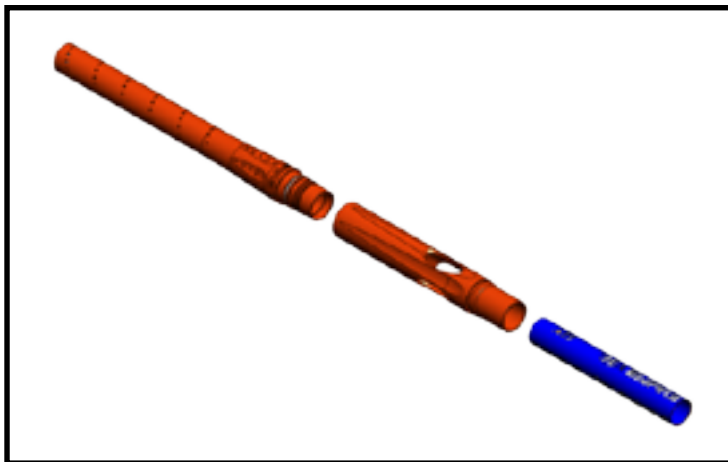

To determine the correct bore size:

1. Assemble the barrel and choose an insert and install it into the barrel back.
2. Select 5 - 10 paintballs of the same type you will be using to play
3. Place a ball into the end of the barrel
 - a. Tip the barrel, if the ball rolls through without any outside force, switch to a smaller insert. The inserts have the size engraved onto the side of each one (sized .675, .680, .685, .690, .695)
 - b. If the ball barely fits into the barrel and you can't blow it out (easily) switch to a larger insert.
4. When the ball is blown out of the barrel listen for a small pop sound. If you can blow the ball out of the barrel without blowing hard you should have a good ball-to-bore match.

Note: The more you exhale through the barrel, the more moisture can accumulate within the insert and affect your testing. If you notice that the ball is starting to stick, or see a buildup of moisture, clean and dry the barrel before continuing with the selection of bore sizes.


BARREL INSTALLATION

- The Vanquish and the supplied Super Freak barrel use Autococker threads.
- Make sure the Vanquish is de-gassed, loader removed, no paintballs in the feedneck or breech, and the marker is turned OFF prior to installing barrel.
- While pointing the marker in a safe direction, place the threaded end of the barrel into the front opening of the marker.
- Turn the barrel clockwise until it stops (Do not over tighten).
- Install the included barrel-blocking device. This can be barrel bag or other such device that prevents accidental discharge of paintballs.



Vanquish Power On/Off

- Turn Marker ON - Press and hold the CENTER of the Directional Pad (the black button/joy stick located under the screen) until the screen illuminates to turn the board/marker ON. The Boot Up Splash Screen will display for 3 seconds. You are now in LIVE Mode (see below for more details) and the marker is ready to fire.
- Turn Marker OFF - Press and hold CENTER on Directional Pad (D-pad) to enter the MAIN Menu, release D-Pad and then press CENTER on D-Pad when the display reads OFF to turn board off.
- Automatic Off feature - The Empire Vanquish also has an automatic off feature. If you accidentally leave your marker powered up, it will shut itself off after approximately 10 minutes of inactivity.

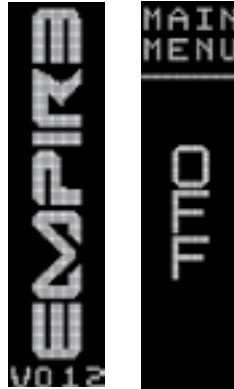

Note: the Auto Off time and the Boot Screen Display are adjustable in the SYSTEM Menu

Tank Installation

The Empire Vanquish is designed to work with compressed air/nitrogen only. Do not use CO₂, as it will damage your marker. The Empire Vanquish utilizes a fully functional regulator at the bottom of the grip frame that doubles as an On/Off ASA (Air Source Adapter) or receiver for a standard threaded preset output compressed air system. If you are using an adjustable output regulator system, the output pressure should be 500-650 psi.

WARNING

- Remember compressed air or nitrogen systems can be extremely dangerous if misused or improperly handled. Use only cylinders meeting D.O.T., TC or regionally defined specifications.
- Never add any lubricants or greases into the fill adapter on your tank regulator.
- Do not install compressed air or load paintballs into your Empire Vanquish until you feel completely confident with your ability to handle your Empire Vanquish safely.


BEFORE PRESSURIZING YOUR EMPIRE VANQUISH

- Check to make sure that you and anyone within range are wearing eye protection designed specifically for paintball.
- Double check that all screws are tightened and no parts are loose before installing your tank.

- Make sure the Firing Engine system is properly locked in place.
- Ensure you have a barrel plug, barrel sock, or other specifically designed barrel blocking device in place.
- Make sure there are no paintballs in the marker and the power is off.

PRESSURIZING YOUR EMPIRE VANQUISH

- Flip the regulator's On/Off ASA lever forward so it's pointing toward the front of the marker.
- Install a compressed air tank, by screwing it in clockwise; making sure it's fully threaded into the ASA.
- Flip the On/Off ASA lever back so it's flush with the regulator and pointing toward the rear of the marker. The marker will become pressurized.

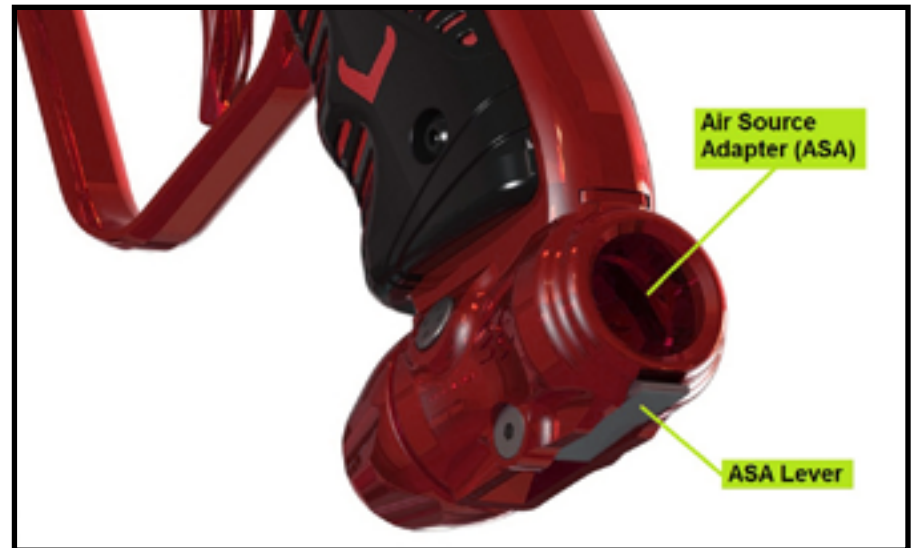




DE-PRESSURIZING YOUR EMPIRE VANQUISH

- Make sure a barrel-blocking device is installed in/on the end of the barrel.
- Turn the Empire Vanquish off using the D-Pad as explained above.
- Remove loader and all paintballs from marker.
- Flip the On/Off lever forward and allow the gas to vent from the regulator.
- Air may remain within the marker once the regulator is vented. While the barrel blocking device is still installed, turn your Vanquish on, turn the eyes off and pull the trigger a few times to deplete all remaining air.
- Read the pressure rating and make sure the pressure reads “LOW”.
- Remove your air cylinder by slowly and carefully unscrewing it counter-clockwise.

Installing a Loader and Paintballs

The Empire Vanquish uses .68 caliber, water-soluble paintballs, readily available at paintball pro-shops, commercial playing fields, and many sporting goods stores. The paintballs feed from the loader through the neck and into the breech of the marker.

The Empire Vanquish comes equipped to accept standard-gravity feed loaders as well as most agitating and force-feed loaders. Open the clamp lever and place the loader neck directly into the marker feed neck. Align the loader in line with the marker so the nose points in the same direction as the barrel. Close the lever, noting that it might be necessary to adjust the feed neck's clamping screw to get a snug fit on your loader.

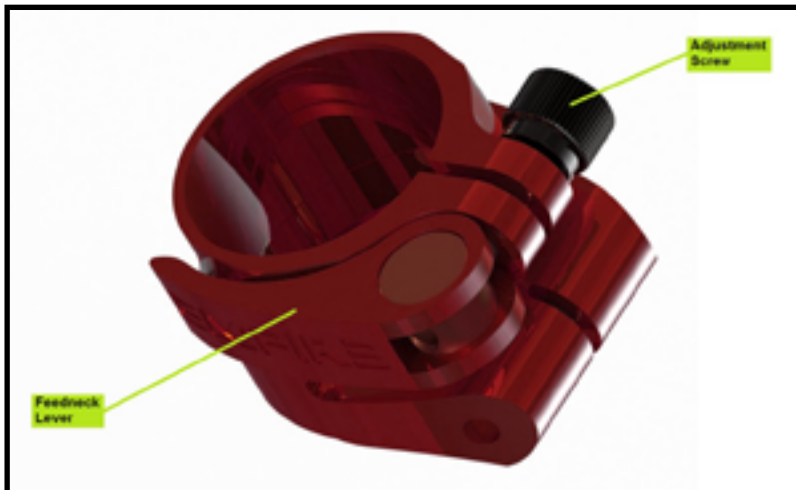

Firing the Empire Vanquish

Keep your finger out of the trigger guard and away from the trigger, point the muzzle of your marker in a safe direction at all times during this process. Be sure your goggles are securely in place and make sure the Vanquish marker is off.

Warning: Everyone within firing range should always use ASTM approved eye and face protection in the presence of live paintball markers.

- Place the empty loader onto the marker. Be sure that it is securely mounted in place
- Install and apply the compressed gas, pressurizing the marker
- Put the paintballs into the loader
- Remove the barrel plug, sock or barrel-blocking device
- Aim the Vanquish in a safe direction.
- Turn the Vanquish ON: Press and hold the CENTER of the D-Pad to turn board/marker ON
- Aim the Vanquish at the target
- Pull the trigger with a smooth squeezing motion

Caution: When the game you are playing is over, remember to place the barrel blocking device onto your barrel and turn the marker off.

Vanquish SETUP AND ADJUSTMENT

Battery Replacement and Life Indicator

The Empire Vanquish requires a single 9-volt battery as the electronic power source. The use of brand-name batteries is highly recommended. The 9-volt battery is located within the grip and is accessed through the removal of the grip panel by using the 3/32" hex wrench to remove the grip screws. Confirm that the marker is OFF before changing or installing the battery.

If there is already a battery in the grip, carefully disconnect the battery from the battery harness, and then connect a fresh 9-Volt battery to the harness. Make sure that there are no abrupt kinks in the wires and that they are comfortably seated. Do not force into place. Then re-install the grip and secure with the grip screws. The Empire Vanquish also has a battery life indicator visible on the screen in Live Mode. The battery icon will show the power level remaining in the battery.

Note: Some rechargeable batteries may be too large for the Empire Vanquish battery compartment. If they don't fit, please don't force them as this may cause damage.





Optional Soft-Shot Bolt

You will notice that your Vanquish comes with 2 different Bolts. One Bolt is installed on your marker and the other was shipped as a separate component. The red anodized Bolt (not installed in the marker) is called the Soft-Shot Bolt. This Bolt is designed so that while in the firing cycle, the air is restricted from venting, so that when the Bolt returns, it hits an air cushion. This creates a softer shot, but at the expense of a lower cycling speed and fewer balls-per-second (approx. 13.5 bps). Please note that due to the restrictions of most tournaments, playing with this lower cycle rate is not a concern and some players prefer the softer feeling shot. To insure complete satisfaction with the Vanquish in any playing condition, we offer you both Bolts.

See the GENERAL MAINTENANCE section for installation instructions

Pressure and Velocity Adjustment

The velocity can be adjusted by adjusting the pressure. Locate the Pressure Adjustment Screw and using the 3/32" Hex wrench, turn the screw clockwise (inward) to increase the pressure (and velocity). Turn the screw counter-clockwise to decrease the pressure.


Turn on the Vanquish and enter the LIVE mode on the display (see below for more detail). Press and hold the D-pad to the Left or Right for 1 second at a time to change displayed information. Repeat this process until the display cycles to pressure reading. This visual indicator will help determine the correct pressure/velocity you desire.



Trigger Adjustment

There are five adjustments that can be made on the on the trigger. Use the 3/32" hex wrench to make any desired adjustments:

- A. Magnetic Tension - this affects how "hard" the pull of the trigger is
 - Turning the adjustment screws "in" or clockwise will increase the force needed to pull the trigger
- B. Forward Travel - This adjusts the position of the trigger when not being fired
 - Turning the adjustment screws "in" or clockwise will decrease the trigger length of travel
- C. Stop - This adjusts the farthest position the trigger will travel when depressed
 - Turning the adjustment screws "in" or clockwise will decrease the travel of the trigger by having the trigger stop sooner
- D. Activation Point - This adjusts the position where the trigger pull registers a shot
 - Turning the adjustment screws "in" or clockwise will decrease the travel of the trigger needed before the Vanquish registers a shot
- E. Spring Tension - Unscrew for more tension and more resistance. This adjustment can only be made by removing the trigger or by splitting the body and foregrip (see page 23).

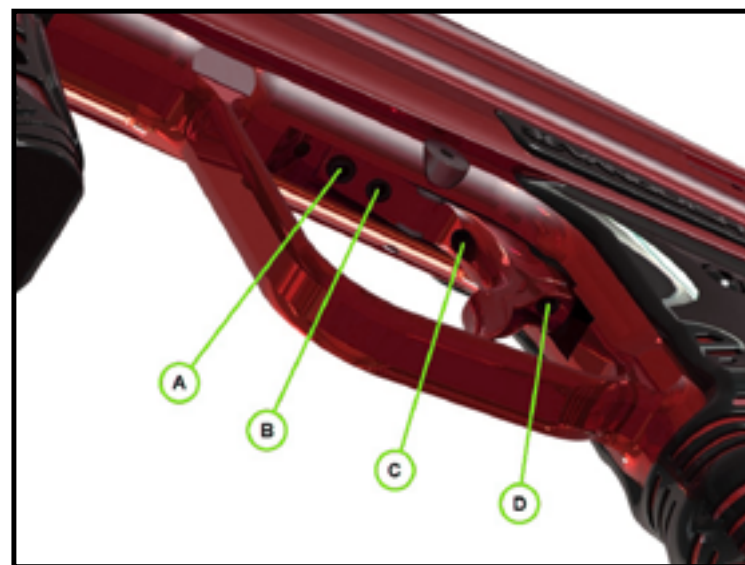



ELECTRONIC BOARD FUNCTIONS

- Turn Marker ON - Press and hold the CENTER of the Directional Pad (the black button/joystick located under the screen) to turn board/marker ON - You are now in LIVE Mode (see below for more details) and the marker is ready to fire. The D-PAD joystick can be moved UP, DOWN, LEFT, RIGHT or pressed IN
- Turn Marker OFF - Press and hold CENTER on Directional Pad (D-pad) to enter the MAIN Menu, release D-Pad and then press CENTER on D-Pad when the display reads OFF to turn board off.
- Automatic Off feature - The Empire Vanquish also has an automatic off feature. If you accidentally leave your marker powered up, it will shut itself off after approximately 10 minutes of inactivity.

Note: The Auto Off time is adjustable in the SYSTEM Menu

Boot Up Splash Screen: When the marker is turned on the screen will display the boot up splash screen graphics for 3 seconds (Note - the boot screen display time can be changed via the settings menu, see page 15). After the boot screen time expires the marker is in LIVE mode and ready to fire. You may exit the boot screen and skip to LIVE mode at any time by moving the joystick in any direction or by pressing the trigger.

Note: The boot screen graphics can be changed using the Vanquish Boot Screen Editor and the Vanquish USB Tool on your PC. These applications come with your Vanquish Marker on the disc with the manual.

FIRMWARE VERSION: The firmware version will display at the bottom of the standard boot screen. If using a custom boot screen, software version will not display.




LIVE MODE

LIVE Mode is the standard mode when firing the marker. The main display will show the current Firing Mode, the current Rate of Fire (ROF) setting, Battery Level, Tournament Lock Status, Trigger Status, EYE Status, Game Timer, user preferred marker data (default is Pressure Reading).

Live Mode D-Pad Controls:

- Firing Mode - The upper section of the display shows the current Firing Mode. The Vanquish offers eight different Fire Mode options.
- Below the Firing Mode is the current Rate of Fire Cap setting, which can be changed in the CONFIG Menu (see below for more details). This number will change depending on whether the Eyes are On or Off.
- Battery Level Indicator - On the upper left of the display, below the Rate of Fire, is the Battery Level indicator. The indicator will blink when the battery is fully depleted.
- Tournament Lock - Below the Rate of Fire is the Tournament Lock indicator, shaped like a padlock. The Tournament Lock is engaged when the padlock icon is closed. The Tournament Lock can only be set by pressing a button on the Vanquish board (see page 16 for more details).
- Trigger Status - The display will show the status of the trigger - a down arrow indicates that the trigger is depressed.
- Eyes Status - Eyes are electronic light beams that will not allow the marker to fire until a paintball is completely loaded into the breech and "seen". This feature helps eliminate chopped paintballs. Press D-Pad in the UP direction to toggle Eyes ON or OFF. The display icon will show one of four settings: Eye Off, Eye On-No Ball, Eye On with Ball, and Eye Malfunction
- Game Timer - On the bottom left, the display shows the Game Timer. Press the D-Pad in the DOWN direction to start the Game Timer. Press DOWN and hold for 1 second to stop the timer or hold DOWN for 3 seconds to reset the Game Timer.
- Press and Hold the D-Pad in the LEFT or RIGHT directions to display more user data.
- Regulator Pressure - The Vanquish Marker has a built in temperature compensated

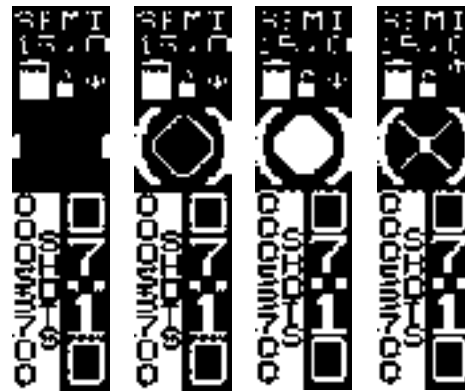




precision electronic pressure transducer. This shows the marker pressure as regulated by the ASA/Regulator. The pressure transducer has a range of 50-250psi. Out of this range, pressure will not be displayed, and will display LOW or OVER.

- **Shot Counter** - The marker will keep track of the number of shots fired. This number will increase each time the solenoid is cycled and will be saved even when power is disconnected. Shot Counter can be reset in the settings menu.
- **AVG and Peak ROF's Achieved** - The Average ROF is the highest actual number of shots that were started within 1 second. The Peak ROF is the shortest time between 2 consecutive shots. This can be reset by pressing the center on the joystick 2 times quickly (Like double clicking a mouse).
- **Lube Gauge** - The Lube Gauge will monitor how many shots have occurred since last time the marker was lubricated. This gauge must be reset by the user when the marker is lubed for an accurate reading. There is also an alert associated with the Lube Gauge (see page 15 for Lube Alert).
- **MAIN Menu** - Press and hold CENTER on D-pad to enter the MAIN Menu (see below for more details).


MAIN MENU

The display will show "MAIN MENU" at the top of the screen indicating the Main Menu. Press the D-pad to the RIGHT, LEFT, UP or DOWN directions to scroll through the MAIN Menu options. Press CENTER on the D-pad to make a selection.

- **OFF** - Turns Marker Off
- **CONFIG** - Enters User CONFIGurations Menu (see below)
- **SYSTEM** - Enters SYSTEM Settings Menu (see below)
- **EXIT** - Exits back to LIVE Mode

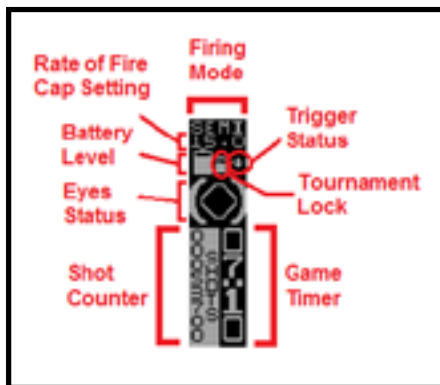

Note: MENU QUICK EXIT - As long as you are not currently modifying a setting, you can exit any menu at any time by pressing and releasing the trigger. This will take you back to LIVE Mode.

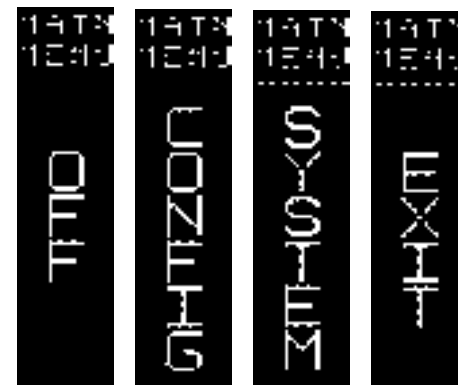

CONFIG MENU:

Note: Settings under this menu affect the markers firing characteristics and may not be modified when tournament lock is on. Press the D-pad in the UP or DOWN directions to scroll through the USER CONFIGURATIONS Menu options. Press CENTER or RIGHT on the D-pad enter the selected option and see the current setting.

User Configurations

There are 3 fully customizable user configurations (or profiles). The current user CONFIG NUM (Profile) is displayed on the screen (1, 2, or 3).

- Only the settings under CONFIG menu are linked to a specific User Profile.
- If Tournament Lock is active, the marker will beep when trying to make a selection and you cannot modify any settings in the CONFIG menu.
- Changing the values of a setting will only affect the Profile that is currently chosen.

If the current Profile is 1, any changes to the user settings in the CONFIG menu will only affect Profile 1.





FIRE MODE - Choose between the different firing modes

- The current Firing Mode setting is displayed on the right side of the screen.
- Press **CENTER** or **RIGHT** to change the Fire Mode setting
- Press **UP** or **DOWN** to cycle through Firing Modes
- Press **CENTER** or **LEFT** to save your selection
- **SEMI** - Semi automatic firing shoots 1 shot per trigger pull up to the max ROF (Rate of Fire) setting
- **RAMP** - Semi auto shots (equal to Ramp Shot Start setting), then a Ramping rate of fire up to the max ROF setting (if Ramp Sustain Trigger Pulls per Second is achieved, see below)
- **BURST** - Semi auto shots (equal to Ramp Shot Start setting), then multiple-shot bursts at the max ROF. The number of shots in the burst is adjustable in the **BURST SHOT** setting. If time between shots is longer than Ramp Reset setting the marker goes back to Semi Automatic and the Ramp Start shot counter is reset.
- **AUTO** - Semi auto shots (equal to Ramp Shot Start setting), then Fully Automatic firing at the **ROF CAP** setting. If time between shots is longer than the Ramp Reset setting the marker goes back to Semi Automatic and the Ramp Start shot counter is reset.
- **PSP B** - Complies to 2010-2012 PSP rules using Burst mode as described above
- **PSP R** - Complies to 2010-2012 PSP rules using Ramp mode as described above
- **MILL** - Complies to 2010-2012 Millennium Series Rules using Ramp mode as described above
- **NPPL** - Complies with 2012 NPPL rules using Semi Auto mode as described above

ROF CAP - Choose between having the marker Rate of Fire Capped or Uncapped. Turning this setting **ON** will cap the marker at the **ROF (•) ON** setting. Turning this setting **OFF** will uncapped the marker and allow the marker to fire as fast as paintballs can be loaded and detected by the eyes.

Note - Firing modes other than Semi may not be uncapped due to ASTM Safety Regulations.

- The screen displays the current setting of whether **ROF CAP** is On or OFF
- Press **CENTER** or **RIGHT** to change the ROF Cap setting
- Press **UP** or **DOWN** to cycle through ON or OFF
- Press **LEFT** or Press **CENTER** on D-Pad to save the setting and return to **CONFIG** menu



ROF (•) ON - The maximum Rate of Fire with Eyes On (ROF Cap must be ON)

- The screen displays the current **ROF EYES ON** setting
- Press **RIGHT** or Press **CENTER** on D-Pad to change the ROF with **EYES ON** setting
- Press **UP** or **DOWN** to increase/decrease the BPS setting (8.0-25.0 BPS, in 0.1 BPS increments)
- Press **LEFT** or Press **CENTER** on D-Pad to save setting and return to **CONFIG** menu



ROF (•) OFF - The maximum Rate of Fire with Eyes OFF

- The screen displays the current **ROF EYES OFF** setting
- Press **RIGHT** or Press **CENTER** on D-Pad to change the ROF with **EYES OFF** setting
- Press **UP** or **DOWN** to increase/decrease the BPS setting (8.0-25.0 BPS, in 0.1 BPS increments)
- Press **LEFT** or Press **CENTER** of D-Pad to save setting and return to **CONFIG** menu



ROF Default - The maximum allowed Rate of Fire if the eyes become dirty or malfunction.

- The screen displays the current **ROF Default** setting (in BPS)
- Press **RIGHT** or Press **CENTER** on D-Pad to change the ROF Default setting (default is 8 BPS)
- Press **UP** or **DOWN** to increase/decrease the BPS setting (7-12 BPS, in 1 BPS increments)
- Press **LEFT** or Press **CENTER** of D-Pad to save setting and return to **CONFIG** menu



Dwell - Is the amount of time the solenoid stays on to fire a ball. Setting the Dwell too high will decrease efficiency. Setting the Dwell too low will cause inconsistent velocity.

- The screen displays the current Dwell time(in milliseconds)
- Press RIGHT or Press CENTER of D-Pad to change the Dwell Time (Default is 15.0 ms)
- Press UP or DOWN to increase/decrease the Dwell setting (8.0-25.0 ms)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu



Pull Debounce (PULL DEB) - Time in milliseconds the trigger pull must be held to register a valid trigger pull. This eliminates electronic noise and vibrations that the board may wrongly interpret as a trigger action (trigger pull) and fire the marker. Too low of a value will cause undesired trigger pulls. Too high of a value will make it harder to achieve high rates of fire.

- The screen displays the current Trigger Pull Debounce setting (in milliseconds)
- Press RIGHT or Press CENTER of D-Pad to change the Trigger Pull Debounce setting (default is 4ms)
- Press UP or DOWN to increase/decrease the Pull Debounce setting (1-20 ms)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu

Release Debounce (REL DEB) - Time in milliseconds the trigger must remain released before next pull can be registered. Too low of a value will cause undesired trigger pulls. Too high of a value will make it harder to achieve high rates of fire.

- The screen displays the current Trigger Release Debounce setting (in milliseconds)
- Press RIGHT or Press CENTER of D-Pad to change the Release Debounce setting (default is 6ms)
- Press UP or DOWN to increase/decrease the Release Debounce setting (1-20 ms)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu



AMB Level - Anti-Mechanical Bounce will help prevent "Run Away" during sustained firing which is described as the marker shooting extra shots when the user is not pulling the trigger. A lower value will make it easier to maintain high rates of fire. A higher value will prevent "Run Away."

- The screen displays the current AMB Level (adjustable from level 0-10 with level 0 being off)
- Press RIGHT or Press CENTER of D-Pad to change the AMB Level (default is 0)
- Press UP or DOWN to increase/decrease the AMB LEVEL setting (1-10)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu



Ball in Place (BIP) Time - Consecutive milliseconds the Eyes must sense a ball before they will allow the marker to fire. Increase this setting for slower feeding loaders to avoid chopping balls in the breach. Decrease this setting for use with faster feeding loaders to increase max ROF. This setting only has an affect when the eyes are on and not malfunctioning. If not using a force feed loader a setting of at least 10ms is recommended.

- The screen displays the current BIP Time (in milliseconds)
- Press RIGHT or Press CENTER of D-Pad to change the Ball In Place setting (default is 5ms)
- Press UP or DOWN to increase/decrease the BIP setting (1-20 ms)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu

Anti-Bolt Stick (ABS) Wait Time - The time in seconds that must expire after a shot before ABS is activated. This helps prevent first shot drop-off. ABS is a feature to compensate for stiction of the bolt which causes low velocity on first shots of a string.

- The screen displays the current ABS Wait Time (in seconds)
- Press RIGHT or Press CENTER of D-Pad to change the ABS Wait setting (default is 60s)
- Press UP or DOWN to increase/decrease the ABS Wait setting (10-200 sec, in 10 second increments)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu





Anti-Bolt Stick (ABS) Dwell - Time that the dwell is increased by for the first shot when ABS is activated. Too high of a setting may cause first shot of a string to have high velocity. Too low of a setting may cause excessive bolt stick or first shot drop off.

- The screen displays the current ABS Dwell Time (in milliseconds)
- Press RIGHT or Press CENTER of D-Pad to change the ABS DWELL setting (default is 3ms)
- Press UP or DOWN to increase/decrease the ABS Dwell setting (0-10 ms)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu



Ramp Start - Number of Semi-Auto shots needed before selected firing mode kicks in (affects all firing modes but Semi-Auto and NPPL).

- The screen displays the current Ramp Start setting (in # of shots)
- Press RIGHT or Press CENTER of D-Pad to change the Ramp Start setting (default is 3 shots)
- Press UP or DOWN to increase/decrease the Ramp Start setting (3-12 shots)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu

Ramp Sustain - Trigger Pulls per Second (TPS) that must be maintained to continue ramping (affects RAMP, PSPR and MILL modes).

- The screen displays the current Ramp Sustain setting (in trigger pulls per second)
- Press RIGHT or Press CENTER of D-Pad to see current Ramp Sustain setting (default is 3)
- Press UP or DOWN to increase/decrease the Ramp Sustain setting (3-12 TPS)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu



Ramp Reset - Time after the last trigger pull before Ramp Start Shot count will reset (affects all modes except Semi and NPPL).

- The screen displays the current Ramp Reset (in seconds)
- Press RIGHT or Press CENTER of D-Pad to change the Ramp Reset setting (default is 1.0)

- Press UP or DOWN to increase/decrease the Ramp Reset setting (0.1-1.0 sec)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu

Burst Shots - Determines how many shots are fired at each trigger pull when marker firing mode is BURST or PSP B. This setting will only affect BURST and PSP B firing modes.

- The screen displays the current Burst Shots setting (in # of shots)
- Press RIGHT or Press CENTER of D-Pad to change the Burst Shots setting (default is 3 shots)
- Press UP or DOWN to increase/decrease the Burst Shot setting (2-6 shots)
- Press LEFT or Press CENTER of D-Pad to save setting and return to CONFIG menu
- Press RIGHT or Press CENTER of D-Pad when BACK is visible to return to the MAIN Menu.



SYSTEM MENU

Settings under this menu affect secondary functions of the marker that do not have to do with firing characteristics.

Navigating the System Menu

- Press the D-pad in the UP or DOWN directions to scroll through the SYSTEM Menu options. The current setting for each option will be displayed on the right side of screen.
- To select a setting for modification press the D-Pad RIGHT or CENTER.
- Tilt the D-Pad UP or DOWN to modify the setting value.
- Tilt the D-Pad LEFT or press CENTER to save the setting and go back to the System Menu.

Game Timer - Set the Game Timer countdown duration.

- The screen displays the current Game Timer duration - MM = Minutes, SS = Seconds (MM:SS)
- Press the D-Pad Right or Center to change the duration time (default 7:10)
- Press UP or DOWN to increase/decrease the Game Timer minutes (00-99)





- Press CENTER of D-Pad to save minutes setting
- Press UP or DOWN to increase/decrease the Game Timer seconds (00-59)
- Press CENTER of D-Pad to save seconds setting
- Press LEFT or Press CENTER of D-Pad to save settings and return to SYSTEM Menu

Timer Alarm - An audible alarm sounds with 1 minute left and continuously after the timer has expired.

- Press RIGHT or Press CENTER of D-Pad to change the setting from On or OFF
- Press UP or DOWN to cycle through ON or OFF (default is ON)
- Press LEFT or Press CENTER of D-Pad to save the setting and return to SYSTEM Menu

Trigger CMD - After holding the trigger for 1 second while the marker is Live, Trigger Command allows the marker to perform a function, either Force Shot, or Toggle the Eyes On or Off, or both. A Force Shot is when the marker will cycle once with the Eyes ON even though there is no ball in the breach. This is to allow sound activated loaders to begin loading. The Trigger Command may also be set to OFF which will not perform any function when the trigger is held for 1 second.

- The screen displays the current setting of the Trigger Command
- Press RIGHT or Press CENTER of D-Pad to change the Trigger Command (either OFF, TOGGLE, FORCE or BOTH)
- Press UP or DOWN to cycle through ON or OFF (default is BOTH)
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM menu

Dwell Lock - When selected ON, changing the Dwell Setting in any of the 3 user configurations (C1, C2, C3) will change the dwell for all 3 configurations. When OFF, the dwell in each user configuration can be changed independently.

- The screen displays the current setting of either ON or OFF
- Press RIGHT or Press CENTER of D-Pad to change the Dwell Lock setting (default is ON)
- Press UP or DOWN to cycle through ON or OFF
- Press LEFT or Press CENTER of D-Pad to save the setting and return to SYSTEM Menu



Brightness - Adjustable the brightness of the screen display when screen is not dimmed

- The screen displays the current setting of the Brightness setting (A numerical value of 10%-100%, where 100% is the brightest setting)
- Press RIGHT or Press CENTER of D-Pad to change the Brightness setting (default is 50%)
- Press UP or DOWN to increase/decrease the Brightness setting (10-100)
- Press LEFT or Press CENTER of D-Pad to save the setting and return to SYSTEM Menu




Dim Time - The elapsed time after the last joystick activation in which the screen will dim to save power.

- The screen displays the current Dim Time setting (in seconds)
- Press RIGHT or Press CENTER of D-Pad to change the Dim Time setting (default is 10 sec)
- Press UP or DOWN to increase/decrease the setting (5-60 sec, in 5 sec intervals)
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM menu

Auto Off - The elapsed time after the last trigger activation in which marker will shut off to save power.

- The screen displays the current Auto Off setting (in minutes)
- Press RIGHT or Press CENTER of D-Pad to change the Auto Off time (default is 10 min)
- Press UP or DOWN to increase/decrease the Auto Off setting (5-60min, in 5 minute intervals)
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM menu

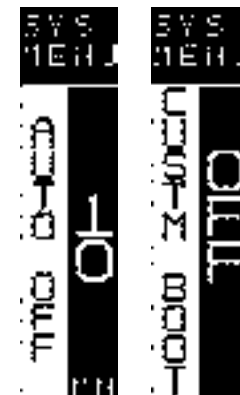

Custom Boot - This setting allows the user to turn the use of the custom boot screen graphics on/off. Custom boot screens can be made and downloaded using the Vanquish Boot Screen Editor and the Vanquish USB Tool software. These applications are included with the Vanquish on disc manual.

Note - if a custom boot screen has not been downloaded but the user turns it on the default boot screen will display. The firmware version will not display



when the custom boot screen is turned on.

- The screen displays whether the Custom Boot setting is On or Off
- Press RIGHT or Press CENTER of D-Pad to change the Custom Boot setting (default is OFF)
- Press UP or DOWN to switch the setting to either ON or OFF
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM menu

Boot Time - This setting changes the amount of time the boot up splash screen is displayed when the marker is turned on. This time is adjustable from 0-5seconds with a setting of 0 not displaying the splash screen at all. This setting applies to both the standard and custom boot screens.

- The screen displays the current Boot Time setting (in seconds)
- Press RIGHT or Press CENTER of D-Pad to change the Boot Time setting (default is 3 sec)
- Press UP or DOWN to increase/decrease the setting (0-5 sec)
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM menu


PRES SIZE - There are two font size options for displaying the Regulator Pressure - Large or Small.

- The screen displays whether the PRES SIZE setting is Large or Small
- Press RIGHT or Press CENTER of D-Pad to change the Pres Size setting (default is Small)
- Press UP or DOWN to switch the setting to either SMALL or LARGE
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM menu

System (SYS) Sound - Turns the system sounds ON or OFF, including the startup, shutdown, and enter/exit menu sounds.

- The screen displays the current setting of either ON or OFF
- Press RIGHT or Press CENTER of D-Pad to change the System Sound (default is ON)
- Press UP or DOWN to cycle through ON or OFF
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM Menu

JSTK Sounds - Joystick Sounds: Enables a beep when the joystick is activated

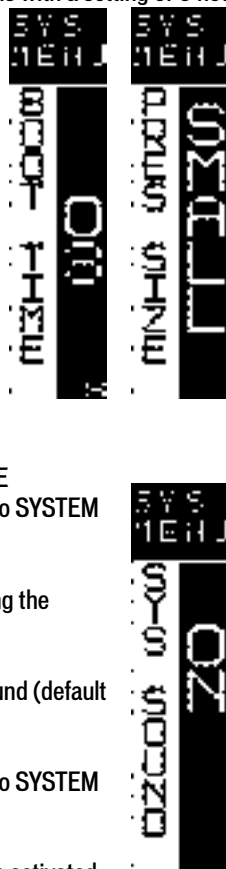

when setting is ON.

- The screen displays the current setting of either ON or OFF
- Press RIGHT or Press CENTER of D-Pad to change the Joy stick Sound setting (default is ON)
- Press UP or DOWN to cycle through ON or OFF
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM Menu


Lube Alert - This setting turns the Slick Assistant lube alerts ON or OFF. The Slick Assistant lubrication monitoring system will alert the user if it is time to re-lube the marker. This alert plays a sound and shows a special alert message on screen when the marker is turned on. It also plays a sound if the Slick Assistant Lube Gauge is displayed during live mode.

- The screen displays the current setting of either ON or OFF
- Press RIGHT or Press CENTER of D-Pad to change the Lube Alert setting (default is ON)
- Press UP or DOWN to cycle through ON or OFF
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM Menu

Reset Lube - This setting will reset the lube gauge. This should be reset each time the marker is lubed. Two choices reset or cancel

Training - When training mode is ON, while in Live Mode, instead of the marker cycling the solenoid, it will chirp quickly. The eyes are bypassed. This is for users to practice trigger activation without the need for an air source. Note - the marker will not fire while training mode is on.

- Press RIGHT or Press CENTER of D-Pad to see if Training Mode setting is On or OFF
- Press UP or DOWN to cycle through ON or OFF (default is OFF)
- Press LEFT or Press CENTER of D-Pad to save setting and return to SYSTEM Menu

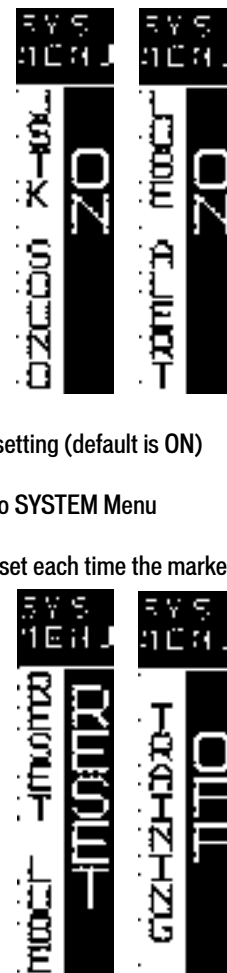



RST Shots - Reset Shot Counter: Resets the Shot Counter when YES is selected (also available through LIVE Mode menu)

- Press RIGHT or Press CENTER of D-Pad to Reset Shot Counter
- Press LEFT or Press CENTER of D-Pad to reset the counter, then return to SYSTEM Menu

FACTRY RST - Factory Reset: Resets all settings to factory defaults when YES is selected

- Press RIGHT or Press CENTER of D-Pad for FACTORY RESET
- Press UP or DOWN to cycle from NO to YES
- Press LEFT or Press CENTER of D-Pad to activate RESET if YES is set
- Screen will then display "Resetting" and then will shut down



BACK - Selecting will return you to the MAIN Menu


- Press RIGHT or Press CENTER of D-Pad to return the MAIN Menu

TOURNAMENT LOCK

The tournament lock can be toggled on/off by using the tournament lock button located just in front of the trigger on the underside of the body. The marker will play a distinct sound when the tournament lock is toggled and the on screen tournament lock icon will change accordingly.

SOFTWARE VERSION

- On startup, the software version will display next to the logo.
- Hold CENTER on D-Pad during startup to continuously display the logo and software version.

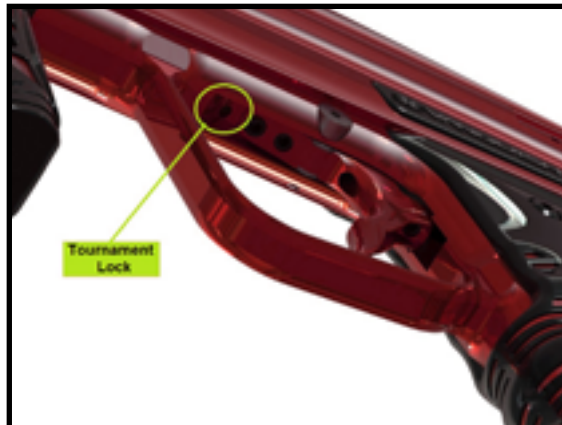

VANQUISH MENU TREE

CONFIG	OFF	Turns Vanquish Off
	(these settings are locked when tournament lock is active)	
	User Profile	1,2,3 3 Fully customizable user configurations - only settings under CONFIG menu are linked to a User Profile
	Firing Mode	
	Semi	Semi automatic firing up to max ROF setting
	Ramp	Semi to Ramp Start Shots then step up to ROF Cap setting if Ramp Sustain Trigger Pulls per Second (TPS) is achieved
	Burst	Semi to Ramp Start Shots then fires at ROF Cap setting for Burst Shot amount
	Full Auto	Semi to Ramp Start Shots then Fully Automatic at ROF Cap setting
	PSP B	Compliant with PSP 2010-2012 rules using Burst mode described above
	PSP R	Compliant with PSP 2010-2012 rules using Ramp mode described above
	MIL 10	Compliant with 2010-12 Millennium Series rules using Ramp mode as described above
	NPPL	Compliant with 2012 NPPL Rules using Semi Auto mode as described above
	ROF CAP	ON/OFF Toggle On/Off for ROF Cap with Eyes ON
	ROF EYES ON	8.0-25.0BPS Max Rate of Fire with Eyes ON (ROF Cap must be ON)
	ROF EYES OFF	8.0-25.0BPS Max Rate of Fire with Eyes OFF
	Dwell	8.0-25.0ms Dwell; solenoid on time in milliseconds
	PULL DEB	1-20ms Trigger Pull De-bounce; time in milliseconds trigger pull must be held to be valid
	REL DEB	1-20ms Trigger Release De-bounce; time in milliseconds trigger must remain released before next pull can be activated
	AMB LEVEL	0-10 Helps prevent bounce during rapid fire.
	BIP TIME	1-20ms Ball In Place time; time in milliseconds ball must stay in breech before it can be fired
	ABS WAIT	10-200s Anti-Bolt Stick Wait Time; time that must expire after a shot before ABS is activated
	ABS DWELL	0-10ms Anti-Bolt Stick Dwell; time in milliseconds that will be added to dwell after ABS Wait time to prevent bolt stick
	RAMP START	3-12 shots Ramp Start; number of Semi-Auto shots before ramping kicks in (affects all firing modes but semi-auto)
	BURST SHOTS	2-6 shots Amount of shots per pull, used when in Burst mode
	RAMP SUSTN	3-12TPS Ramp Sustain; Trigger Pulls per second that must be maintained to ramp (only used in RAMP and Mil 10 modes)
	RAMP RESET	0.1 to 1.0s Ramp Reset; time in seconds after last trigger pull in which ramping will stay active
	BACK	Back to Main Menu

VANQUISH MENU TREE

SYSTEM	GAME TIMER	00:00 - 99:59	Game Countdown Timer; MM:SS -> MM = Minutes, SS = Seconds
	TIMER ALARM	On/Off	Game Timer Alarm; audible alarm sounds when game time expires if on
	TRIGGER CMD	None, Force, Toggle	Trigger Command; Function for trigger being held for 1second. None=No Function, Force=Force Shot, Toggle=Toggle Eyes
	DWELL LOCK	On/Off	Dwell Lock; When on all 3 user profiles will have the same dwell setting. When off each profile may have a different Dwell value
	BRIGHTNESS	10-100%	Screen Brightness; Adjusts brightness of screen when not dimmed
	DIM TIME	5-30s	Dim Time; time after last joystick activation in which screen will be dimmed
	AUTO OFF	5-30min	Auto Off; time after last trigger activation in which marker will be shut off
	CUSTM BOOT	On/Off	Custom Boot Screen; Turns on user designed custom boot screen
	BOOT TIME	0-5 seconds	Anmount of time boot screen will display when marker is turned on
	PRESSURE SIZE		
		Small/Large	Regulator Pressure Display Text Size; Changes size of text of regulator pressure display
	SYS SOUND	On/Off	System Sounds; turns system sounds on/off incl. startup, shutdown, enter/exit menu sounds
	JSTK SOUNDS	On/Off	Joystick Sounds; turns beep when joystick is activated on or off
	LUBE ALERT	On/Off	Slick Assistant Lube Alert, Turns alert screen on boot up and alert sounds on or off
	RESET LUBE	Reset/Cancel	Reset the lube gauge back to full if reset is chosen
	TRAINING	On/Off	Training Mode; when on eyes are bypassed, solenoid does not cycle, marker chirps when fired
	RESET SHOT	Reset/Cancel	Resets shot counter back to zero
	FCTRY RST	Reset/Cancel	Factory Reset; resets all settings to factory defaults
	EXIT		
	BACK	Back to Main Menu	Exit Main Menu to LIVE mode



Vanquish PC SOFTWARE

The Vanquish PC Software consists of two separate applications, the Vanquish USB Tool which allows communication between the PC and Vanquish, and the Vanquish Boot Screen Editor which allows users to create custom boot screens that can be downloaded onto the Vanquish via the Vanquish USB Tool.


PC Requirements:

- Windows Vista, XP or 7 Operating System
- Hardware requirements
- 900 Mhz or faster processor
- Min. 128 MB RAM
- 25 MB of available hard disk space

Software Installation

Step 1 - Vanquish PC Software Installation

1. Insert the CD into your PC or download the files from www.PaintballSolutions.com
2. View the contents of the software files and double-click on "VPC Setup.exe" and follow the onscreen instructions for software installation to your PC.

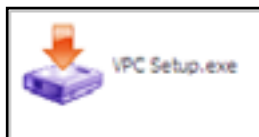

Note: Do NOT open the Vanquish PC software until instructed below!

Step 2 -

Ensure marker is Safe by removing the gas source and all paintballs before proceeding with USB connection. With the Vanquish turned OFF, remove the firing engine and loosen the front grip screw of the Vanquish Marker to access the USB port (see page 24). Connect your Vanquish to your PC via the USB cable that came with the marker.

Note: The battery must be connected to the Vanquish for the USB connection to work.

Step 3 - Installing USB Drivers

Access the USB port on the Vanquish Marker Circuit board and connect the board to your computer via USB cable. If you have an active internet connection, proceed to Step (A). If not proceed to Step (B).



A. If you have an active internet connection the drivers will automatically install. Simply allow windows to install the drivers for you and wait for the installation to complete. Note- windows may install several drivers. If windows does not automatically install proceed to (B) below.

B. To manually install the FTDI USB/COM/Serial drivers please proceed below to the area that matches the Windows version you use:

Windows XP Manual Install:

1. After connecting the Vanquish to the USB port, the New Hardware Found Wizard should appear.
2. Select the option "No, not this time" and click "Next" to continue.
3. Select "Install from a list or specific location (Advanced)" and click "Next".
4. Under "Search for the best driver in these locations" Browse to the "USB Drivers" folder in the Vanquish PC Software Folder then click "Next".
5. Depending on how your system is configured windows may pop up a warning. Click "Continue Anyway".
6. Windows will then proceed to install the first set of drivers. Click "Finish" after complete.
7. After this the New Hardware Found Wizard should appear again to install the second set of



drivers. Proceed as before with steps 2-5 to install.

Windows Vista Manual Install:

1. After connecting the Vanquish to the USB port the New Hardware Found window will appear.
2. Select "Locate and install driver software (recommended)".
3. When windows asks for the disk select "I don't have the disc, Show me other options".
4. Windows will say it could not find driver software. Click "Browse my computer for driver software".
5. Browse to the USB Driver Folder in the Vanquish PC Software Folder. Windows should install the first driver.
6. After installing the first driver the New Hardware Found Window should pop up again to install the second driver. Repeat steps 2-5 to install the second driver.

Windows 7 Manual Install:

1. With Vanquish connected to USB Port go to Start > Control Panel.
2. Select "Hardware and Sound".
3. At the next screen select "Device Manager" under "Devices and Printers".
4. In the Device Manager window under "Other Devices" there should be a device with a name similar to "FT232..." with a yellow warning symbol next to it, indicating the driver is not installed. Right-click this to bring up a small menu.
5. Select "Update Driver Software".
6. Next select "Browse my computer for driver software".
7. Browse to the USB Driver folder in the Vanquish PC Software Folder. This should install "USB Serial Converter" which is the first driver.
8. To install the second driver repeat steps 4-6. This should install USB Serial Port.

Finish Installation

Open the Vanquish USB Tool application (Vanquish USB Tool.exe) and the Vanquish Marker should automatically connect to the USB Tool. The status bar in the bottom of the window will indicate that the Vanquish has been connected.



Using the Vanquish USB Tool Software

The Vanquish USB tool allows users to complete the following tasks: edit and sync settings with the Vanquish, save settings to the PC, download custom boot screens onto the Vanquish, and update the Vanquish software.


1. Assure all paintballs and the gas source is removed from marker and marker has been safely discharged before connecting marker to your PC.
2. Remove bolt system and remove front grip frame screw to expose mini USB port on under side of the main circuit board (see page 24).
3. Connect USB cable between marker and PC.
4. Open the Vanquish USB Tool program and the marker will automatically connect to the Vanquish USB Tool.
5. If the Vanquish USB Tool software program is already open, press Connect.

ONCE CONNECTED:

Once the Vanquish is successfully connected to your PC, the User Configurations and System Settings will be loaded from the Vanquish board and automatically shown in the Vanquish USB Tool.

Users have the ability to:

- Change settings and load them to the marker
- Load settings from a file on the PC and load them onto the marker
- Save currently displayed settings onto the PC
- Flash new software onto the Vanquish
- Load Custom Boot Up Screens onto the Vanquish

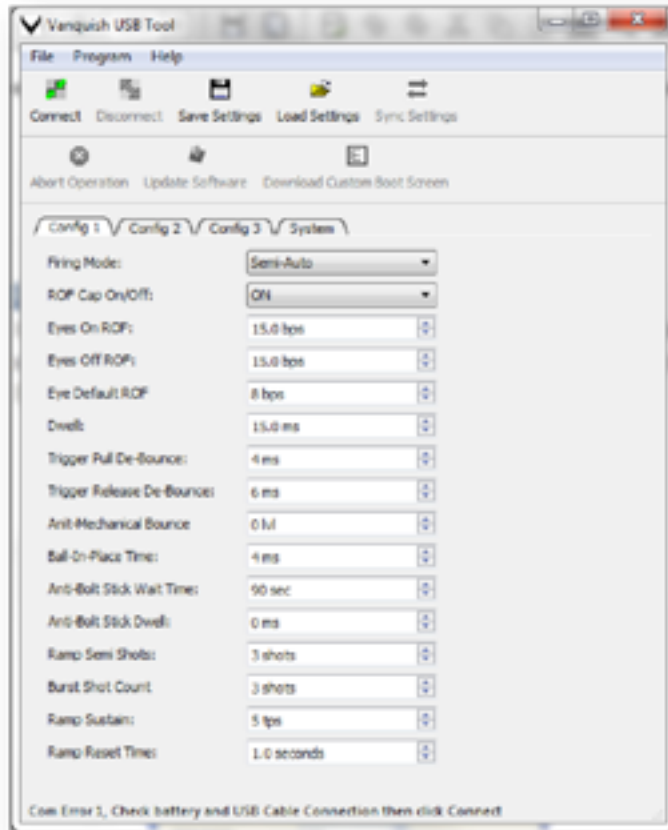

How to Sync Settings with Vanquish Marker

Click "Sync Settings" to sync the setting on the Tool software with the connected Vanquish marker. The settings must be synced before the changed settings appear on the Vanquish marker. The Status bar and pop-up messages will notify users when the sync is complete. Syncing the settings usually takes around five seconds.



 
How to Save Settings to PC

Click Save Settings and follow the prompt to save the current settings from the Vanquish USB Tool. Configuration 1, 2, 3 and System settings will be saved on the PC. The file format is .txt so it may be edited outside of the Vanquish USB Tool.




How to Load Settings from PC

Click "Load Settings" and follow the prompt to open and load a Vanquish settings file into the Vanquish USB Tool software. Click "Sync Settings" to sync the loaded settings with the Vanquish. Settings files are in .txt format, so they can also be edited outside of the Vanquish USB Tool.




How to Update the Vanquish Board Software

 Clicking "Update Software" will open a prompt that allows the user to select a Vanquish Firmware File (.vff). When the file is selected the software will be downloaded onto the Vanquish. The Status Bar and popup messages will notify users when the update is complete. This process typically takes between 30-45 seconds.



How to Download Custom Boot Screens to Vanquish

 Click "Download Custom Boot Screen" and follow the prompt to choose a Vanquish Boot Screen File (.vbs) from the PC. Vanquish Boot Screen files are created with the Vanquish Boot Screen Editor (see below). When the file is selected the custom boot screen will be downloaded onto the Vanquish. The Status Bar and popup messages will notify users when the download is complete. The download typically takes about 5 seconds.



To Disconnect the Vanquish from the PC

Select PROGRAM->DISCONNECT to stop communication between marker and PC.



Vanquish Boot Screen Editor Software

The Vanquish Boot Screen Editor allows you to make your own custom graphics that can be loaded onto your Vanquish Paintball marker using the Vanquish USB Tool software. These graphics can be displayed when you turn on the Vanquish to make your Vanquish unique to you.

The Vanquish Screen is 128 pixels high by 32 pixels wide. The Boot screen editor gives you access to each individual pixel. A white pixel in the editor shows how the pixel will be illuminated on the Vanquish screen. A black pixel signals the pixel will not be illuminated.

Using the Vanquish Boot Screen Editor


- Pixels that are turned On are White. Left click a pixel with the mouse to turn it On.
- Pixels that are turned Off are Black. Right click a pixel with the mouse to turn it Off.

Saving Boot Screens

Click File>Save to save the custom boot screen. The graphics created in the Vanquish Boot Screen Editor are saved in a Vanquish Boot Screen file (extension .vbs). Only .vbs files can be downloaded onto the Vanquish Marker. You must save the boot screen before it can be downloaded onto the Vanquish Marker. To download a custom boot screen onto the Vanquish Marker see Download Custom Boot Screens to Vanquish (see above).

Other Controls

- Click File > Open to load a previously saved Vanquish Boot Screen file.
- The overall size of the editor window can be expanded by dragging the corner of the window.
- Zoom In by using the Options menu, View > Zoom In.
- Show normal size by selecting, View > Normal Size.
- Clear screen (all pixels black) by selecting Options > Clear Screen.
- Fill screen (all pixels white) by selecting Options > Fill Screen.

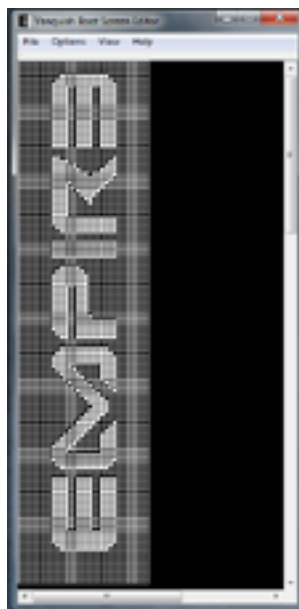


- Invert screen by selecting Options > Invert Screen. This turns white pixels to black and black pixels to white.

Vanquish PC Software Troubleshooting

Vanquish USB Tool will not Connect to Vanquish

- In the Vanquish USB Tool press Disconnect. Then attempt to connect by pressing Connect.
- On the Vanquish, disconnect the USB cable and disconnect the battery. Then re-connect the battery and then the USB cable in that order. Click Connect to attempt to connect again.
- Restart Vanquish USB Tool
- With the USB cable and battery connected to the Vanquish, in the Vanquish USB Tool, go to Program > USB Tool Options to open the settings menu. Under "Com Port" select the Com port named "USB Serial Port" (see picture below). If this choice is not available, the USB drivers have not been installed. See the section above for instructions to install the USB Drivers.

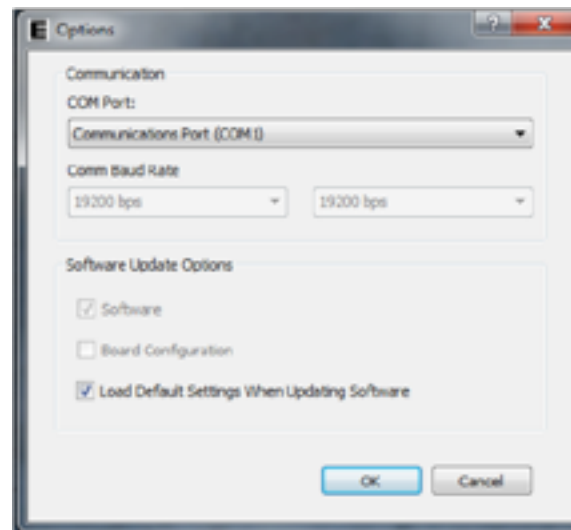



The Status Bar Says “Com Error 1...” or “Com Error 2...”

- On the Vanquish, disconnect the USB Port and disconnect the battery. Then re-connect battery and then the USB Cable in that order. Click Connect to attempt the connection again.

The Status Bar Says “Flash Error 1...” or “Flash Error 2...”

- On the Vanquish, disconnect the USB Port and disconnect the battery. Then re-connect battery and then the USB Cable in that order. Click Connect to attempt the connection again.

Cannot run/open Vanquish USB Tool or Vanquish Boot Screen Editor

The required Microsoft files may not be installed on your computer. These files can be installed by running the installers located in the Vanquish PC Software directory, (Typically C:\Documents and Settings*Windows User Name*\Vanquish PC Software\MsVcRd). Select the 32bit version for 32 bit Windows systems or 64bit version for 64bit Windows systems.

- If you are not sure of whether your Operating System is 32bit or 64bit, this information can be found in the Control Panel under the Start menu. Once in the Control Panel, click on System - the OS version will be displayed in the System screen.

Still having trouble? Contact paintballsolutions.com to speak with tech support personnel.

GENERAL MAINTENANCE

CAUTION: Before attempting to perform any maintenance operations, make sure that all paintballs and air sources have been removed from the marker and that the regulator pressure reads LOW psi. Install a barrel-blocking device, and ensure the Vanquish power is OFF.

Keep your Empire Vanquish clean and lubricated to eliminate the friction that would prevent reliable operation. It is recommended that you clean and lube the marker before each use.

Do not use oil or petroleum-based lubricants in the lubrication of this marker. Teflon or silicon (non-spray only) lubricants designed for use on O-Rings may be used for lubrication for the Firing Engine. SL33K, Dow 33 or the included factory lubricant is recommended.

CAUTION: Before attempting to perform any marker disassembly, make sure that all

paintballs and air sources have been removed from the marker and that the regulator pressure reads **LOW**. Install a barrel-blocking device. Confirm the Empire Vanquish is powered **OFF**.

Disassembly Tips

- Make sure you have a clean area to work on your marker, so you don't lose or misplace parts.
- After reassembling the Empire Vanquish recheck your trigger activation settings.
- Visit PaintballSolutions.com for additional information.

External Cleaning

Use a clean cloth, dampened with water to clean the outside of the Empire Vanquish. Do not use any chemicals or cleaners, as you may damage the protective finish.

Warning: Do not rinse the Empire Vanquish under water, as you may damage the marker's electronics.

Barrel

It is recommended that all sections of that the barrel be removed before any maintenance or disassembly is performed. Simply turn the full barrel counter-clockwise to remove. Use warm water and a barrel cleaning device to keep the barrel in top condition. Dry thoroughly.

Firing Engine Assembly

Removal of Firing Engine

Before you remove the Firing Engine, make sure you remove the air cylinder from the marker and that the pressure reads LOW psi.

- Push and hold in the Back Cap Release Button at the rear of the marker while the rear of the marker is facing a safe direction
- While holding the button in, turn the Back Cap clockwise until it stops
- Now pull the Back Cap back until it stops
- Next, rotate the Back Cap assembly counterclockwise until it stops
- The Firing Engine can now be pulled free of the Body

Maintenance of Firing Engine

Firing Engine maintenance should be performed approximately every 10,000 - 20,000 shots.

1. Remove the Bolt Tip from the bolt by squeezing the rubber tip and pulling it off.



2. Unscrew the Air Guide by turning the Air Guide counter-clockwise to remove from the Back Cap. The Bolt Spring will come out with the Bolt Guide.



3. Push the Bolt out of the back of the Air Guide.



4. Unscrew the Bolt Guide from the Back Cap. Remove old grease and debris from Firing Engine.



5. Wipe the parts down with a clean rag removing any old grease or debris.
6. Inspect the O-Rings on both the bolt and Air Guide for any wear or damage. Replace damaged or worn O-Rings if necessary.
7. Lubricate the inner O-Ring on the Back Cap (#5 from O-Ring Diagram).



8. Apply grease to #6 Bolt O-ring and apply a light coat of grease to entire bolt.



9. Apply grease to the two small O-Rings on the Rod #8a, #8b.



10. Lubricate the 3 inner O-Rings on the Air Guide (#2a, #2b, #2c), no lube is needed on the outer O-Rings.




11. Apply a light coat of grease on the inner surface of the Air Guide, where the Bolt O-Rings make contact.



12. Reassemble the Firing Engine in the reverse order of Step 3 thru 1.

1	Air Guide O-ring - UR 020/70 (72558)	6	Bolt O-ring - BUNA 015/90 (72554)
2	Air Guide (Internal) O-ring - UR 017/70 (72556)	7	Bolt O-ring - UR 016/70 (72555)
3	Back Cap O-ring - BUNA 019/70 (72557)	8	Rod O-ring - UR 013/70 (72552)
4	Back Cap O-ring - UR 020/70 (72558)	9	Rod O-ring - UR 014/20 (72553)
5	Back Cap (Internal) O-ring - UR 017/70 (72556)	10	Rod O-ring - BUNA 015/70 (72554)

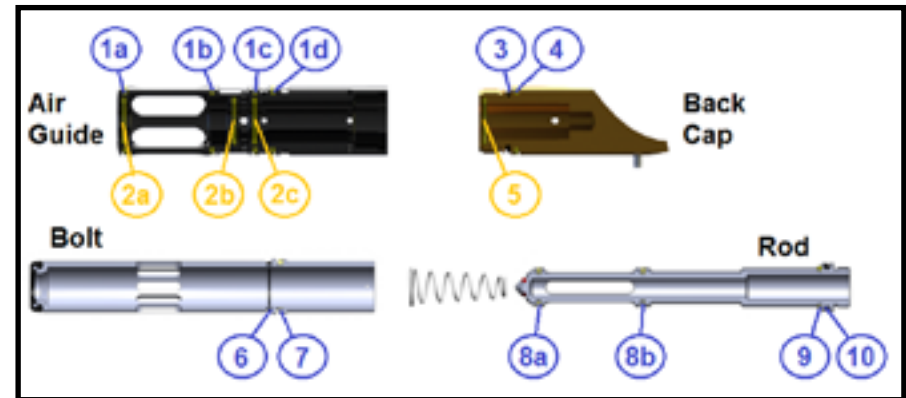

Cleaning the Eyes / Ball Detents

The eyes should be cleaned thoroughly after a ball break. Leaving paint on the eyes for an extended amount of time may cause damage to the electrical contacts. Remove the eye cover to access the eye board. Use a cotton swab to remove paint or debris in the body and off of the eye board. Ensure that the path in front of the eyes is clear and reinstall the eye boards and eye covers.

The Eyes should be cleaned thoroughly after a ball break in the breech. Leaving paint on the Eyes for an extended amount of time can damage the electrical contacts and cause a malfunction.

- Remove the Eye Cover using the 3/32" Hex wrench to access the Eye Board



- Carefully remove the Eye Board from the body
- Use a Q-tip to remove any paint or debris from the Eye Board and the Eye cavity of the Body
- Ensure that the opening in front of the Eyes is clear and that the laser has a clear path to the opposite Eye.
- Inspect the Ball Detents, faulty or worn out Ball Detents can cause double feeding or ball breaks
- Clean or replace as necessary
- Re-install the Eye Board and Eye Cover. Repeat process with the opposite Eye Boards if necessary

Trigger Maintenance

The Trigger is removed using a single screw located on the side of the Grip Frame (see image below). Using the 3/32" Hex wrench, remove the screw to free the Trigger. Once the Trigger is free, inspect for any paint or debris and clean with a cloth dampened with water. The Spring Tension can be adjusted with the Trigger removed. If necessary, clean the bearings to ensure a smooth trigger pull. The bearings can be lubricated with a drop or two of marker oil on the side housing. To re-install, place the trigger back in the Grip frame and replace the Trigger Retention screw.



Regulator

Removal of Regulator

- Remove the two regulator mount screws located on the bottom of the grip frame with a



- 3/32" Allen wrench by turning them counter-clockwise.
- Make sure the O-Ring is on the bottom of the air tube; grease if necessary.
- Slide regulator back into the grip frame and tighten the regulator mount screws with a 3/32" Allen wrench.

Installation of Regulator Assembly

- Make sure the air transfer O-Ring is on the bottom of the grip frame; grease if necessary.
- Slide regulator back into the grip frame and tighten the regulator mount screws with a 3/32" Allen wrench.

Warning: Do not take the regulator apart; it is not designed to be user serviceable. Damage to the regulator will not be covered under warranty.

Splitting the Body

1. Remove the Firing Engine assembly from the Body (see pg x)
2. Locate the screw that holds the Body to the Grip Frame, it is located at the front of the marker, within the Front Grip below where the Barrel meets the Body.
3. Using the 3/32" Hex wrench, completely loosen the screw holding the Body to the Grip Frame.
4. The Body can now be opened away from the Grip Frame hinging at the back of the marker.
5. Once open, you can access the Main Board and the USB port for PC connection.





TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
MARKER LEAKS	
There is a constant leak coming from under the body/trigger frame area	Clean and Lubricate the Firing Engine as described in this manual Check the Regulator pressure using the on screen read out and ensure the pressure is below 200psi. Check O-ring on outside of Air Guide, 4th from the front of the marker (Firing Engine Diagram #1d). Size -020 Urethane Check the O-ring on the outside of the Bolt nearest to the rear of the marker (Firing Engine Diagram #1f) and replace if necessary. Size -016 Urethane Check the Air Transfer O-ring located on the underside of the Body just behind the main circuit board and replace if necessary. Size 1mm X 5mm Buna Remove the main circuit board and check the O-ring located on the Pressure Sensor (The silver cylinder located near the rear of the circuit board). Replace O-ring if necessary. Size -011 Buna Remove the Solenoid and check the 3 Solenoid O-rings located on the underside of the body. Replace if necessary. Size 1mm X 5mm Buna
There is a consistent leak in the breech or down the barrel of the marker	Check the O-ring on Rod closest to front of the marker (Firing Engine Diagram #8a) and replace if necessary. Size -013 Urethane Check the O-ring on inside of Air Guide closest to front of marker (Firing Engine Diagram #2a) and replace if necessary. Size -017 Urethane
There is a constant leak from the exhaust holes on the back cap of the firing engine	Check the O-ring on the Rod nearest to rear of the marker where the Air Guide screws into the Back Cap (Firing Engine Diagram #10) and replace if necessary. Size -015 Buna Check the O-ring on the Rod, 2nd from the front of the marker (Firing Engine Diagram #8b) and replace if necessary. Size -013 Urethane
There is a constant leak coming from between the bottom of the grip frame and the ASA/regulator	Check marker pressure using on screen pressure readout and keep it below 200psi Remove ASA/Regulator and check O-ring located between grip frame and ASA/Regulator. Replace if necessary. Size -006 Buna
ASA/REGULATOR ISSUES	
There is a leak coming from the bottom of the ASA/Regulator in the on/off lever area.	Replace O-ring around tank depression pin. Size -006 Buna
My ASA/regulator does not always instantly de-pressurize when I turn the lever off	Use 3-4 drops of paintball marker oil in the ASA/regulator where the tank is screwed in. Apply air to marker and cycle the marker to work the oil through.
For more advanced regulator issues please contact paintballsolutions.com . Advanced regulator service is recommended only by certified persons.	
MARKER FIRING ISSUES	
My marker will not turn on when I press the power button.	Before trouble shooting ensure marker has been properly cleaned and lubricated and that a fresh, brand name Alkaline or Lithium 9V battery is being used. Change the battery in marker, if battery is new try unplugging battery from marker for at least 2 seconds and re-connecting battery. Ensure front grip frame screw is fully tightened to allow for full connection between main circuit board and front circuit board
My marker has low air efficiency/is not getting the expected amount of shot per air fill but there are no leaks	Note - If the marker is connected to you PC via USB the marker may not turn on. Check the paint size to the barrel size you are using. Using a smaller Super Freak insert to get a tighter fit will greatly increase efficiency Clean and lubricate the Firing Engine (see Maintenance section above) Check rubber bolt tip and replace if necessary Check the Dwell setting on the circuit board and decrease it if necessary. Check O-ring on outside of Air Guide 2nd from the front of the marker (Firing Engine Diagram #1f) and replace if necessary. Size -020 Urethane Check O-ring on inside of Air Guide 2nd from the front of the marker (Firing Engine Diagram #2b) and replace if necessary. Size -017 Urethane Check the paint size to the barrel size you are using. Using a smaller Super Freak insert to get a tighter fit will greatly increase consistency Clean and lubricate the Firing Engine (see Maintenance section above) Change battery in marker Check the Dwell setting on the circuit board and increase it if necessary. If you increase your Dwell you may have to lower the regulator pressure to achieve desired velocity Check the rubber bolt tip and replace if necessary
My marker has inconsistent velocity or inconsistent cycles but there are no leaks	Check the O-ring located on outside of the Bolt nearest to the rear of the marker (Firing Engine Diagram #1f) and change if necessary. Size -016 Urethane Check the O-ring located on inside of the Air Guide 3rd from the front of the marker (Firing Engine Diagram #2c) and change if necessary. Size -017 Urethane Check the O-ring located in the threads on the outside of the Back Cap (Firing Engine Diagram #3) and replace if necessary. Size -015 Buna Check the O-ring located in the inside of the Back Cap (Firing Engine Diagram #5) and replace if necessary. Size -017 Urethane



TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
MARKER LEAKS	
My marker has inconsistent velocity or inconsistent cycles but there are no leaks	Clean and lubricate the Firing Engine (see Maintenance section above)
	Change battery in marker
	Check the Dwell setting on the circuit board and increase it if necessary. If you increase your Dwell you may have to lower the regulator pressure to achieve desired velocity
	Check the rubber bolt tip and replace if necessary
	Check the O-ring located on outside of the Bolt nearest to the rear of the marker (Firing Engine Diagram #17) and change if necessary. Size -016 Urethane
	Check the O-ring located on inside of the Air Guide 3rd from the front of the marker (Firing Engine Diagram #2c) and change if necessary. Size -017 Urethane
My marker will not cycle and a puff of air escapes from the underside of the marker body when the trigger is pulled but there are no leaks	Check the O-ring located in the threads on the outside of the Back Cap (Firing Engine Diagram #3) and replace if necessary. Size -019 Buna
	Check the O-ring located in the inside of the Back Cap (Firing Engine Diagram #5) and replace if necessary. Size -017 Urethane
	Clean and lubricate the Firing Engine (see Maintenance section above)
	Change battery in marker
	Check the Dwell setting on the circuit board and increase it if necessary
	Check the O-ring located on outside of Air Guide 3rd from the front of the marker (Firing Engine Diagram #1c) and replace if necessary. Size -020 Urethane
My marker will not cycle and a puff of air escapes from the rear of the Firing Engine when the trigger is pulled and there are no leaks	Check the O-ring located on inside of Air Guide 3rd from the front of the marker (Firing Engine Diagram #2c) and replace if necessary. Size -017 Urethane
	Clean and lubricate the Firing Engine (see Maintenance section above)
	Change battery in marker
	Check the O-ring on outside of Back Cap (Firing Engine Diagram #4) and change if necessary. Size -020 Urethane
	Check the O-ring on inside of Back Cap (Firing Engine Diagram #5) and change if necessary. Size -017 Urethane
	This is known as Bolt Stick or First Shot Drop Off (FSDO)
After my marker sits for a while the first shot has low velocity or does not fully cycle.	Clean and lubricate the Firing Engine (see Maintenance section above)
	Change battery in marker
	Increase the Anti-Bolt Stick Dwell and possibly decrease the Anti-Bolt Stick Time settings on the circuit board to minimize this effect if it is not corrected from lubricating the firing engine
	Check the Anti-Bolt Stick Dwell setting and decrease it or set it to 0 to turn it off completely
	Check the regulator pressure by using the on screen read out and watch to see if the pressure is increasing significantly. If the pressure rises consistently for more than 1 minute your regulator may need to be serviced. Contact PaintballSolutions.com
	Clean and lubricate the Firing Engine (see Maintenance section above)
My markers velocity decreases during rapid fire	Change battery in marker
	Apply 3-5 drops of paintball marker oil in the ASA/Regulator where the tank is screwed in. Apply air to the marker and cycle the marker 20-50 times to allow oil to work.
	Check the regulator pressure during rapid fire by using the on screen read out. If the pressure is not recharging fully during rapid fire your regulator may need to be serviced. Contact PaintballSolutions.com
	Check and clean the eyes (See general maintenance section for directions on accessing eyes).
	Check rubber bolt tip and replace if necessary
	Check the ball detents in the breech. If either the ball detents or springs is broken or worn replace them.
My marker is chopping paint in the breech	

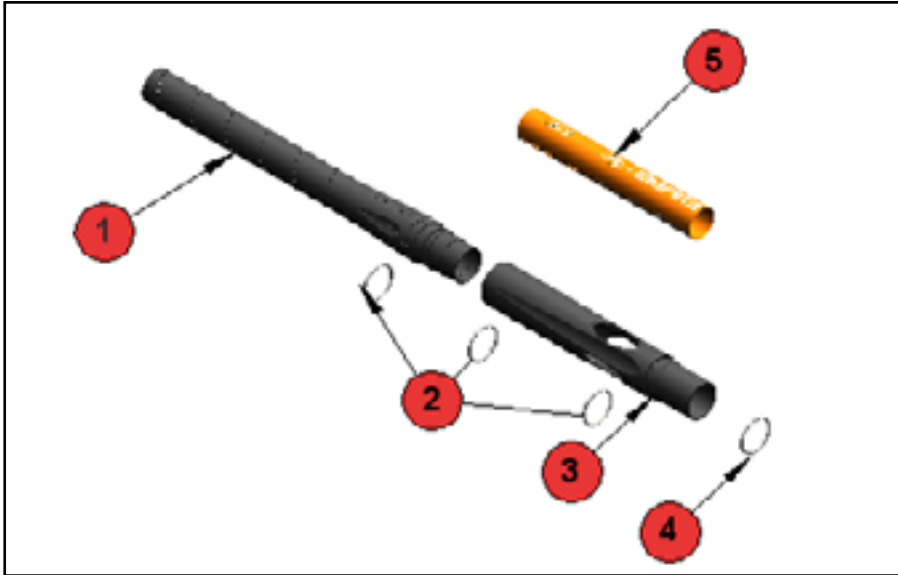


Diagram #	SKU	Part Description
BARREL		
1a	11551	SUPER FREAK 14" ALUMINUM TIP- DUST BLACK
1b	11552	SUPER FREAK 16" ALUMINUM TIP- DUST BLACK
2	72508	O-RING BUNA-N 70 DUR -018 (.739 ID)
3	72622	SUPER FREAK BACK AC - POLISH BLACK
4	72488	O-RING BUNA-N 70 DUR 1MM CS X 19.5MM ID
5a	11520	INSERT .675
5b	11521	INSERT .680
5c	11522	INSERT .685
5d	11523	INSERT .690

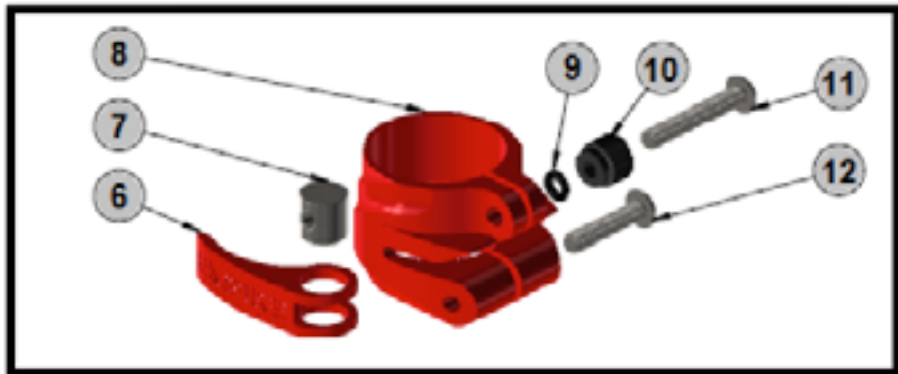


Diagram #	SKU	Part Description
FEEDNECK		
6	72571	FEEDNECK LEVER - DUST BLACK (16950)
7	72573	FEEDNECK LEVER BUSHING
8	72572	FEEDNECK - POLISHED BLACK (16950)
9	72489	O-RING BUNA-N 70 DUR -006 (.114 ID)
10	72570	FEEDNECK THUMB SCREW
11	72497	SCREW BHCS 8-32 X 1.000
12	72496	SCREW BHCS 8-32 X .750

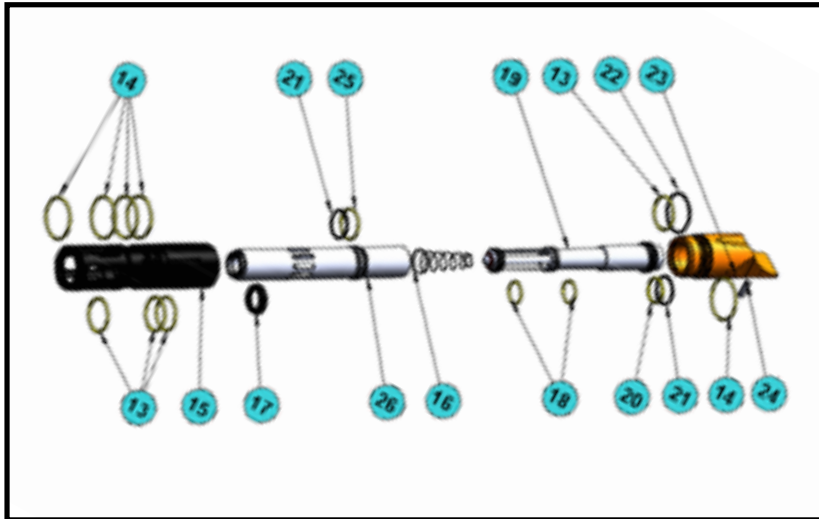


Diagram #	SKU	Part Description
FIRING ENGINE		
13	72556	O-RING URETHANE 70 DUR -017 (.676 ID)
14	72558	O-RING URETHANE 70 DUR -020 (.864 ID)
15	72567	AIR GUIDE
16	72564	BOLT SPRING
17	72565	VALVE RUBBER TIP
18	72552	O-RING URETHANE 70 DUR -013 (.426 ID)
19	72568	ROD
20	72553	O-RING URETHANE 70 DUR -014 (.489 ID)
21	72549	O-RING BUNA-N 70 DUR -015 (.551 ID)
22	72557	O-RING BUNA-N 70 DUR -019 (.801 ID)
23	72566	BOLT GUIDE - POLISH BLACK
24	72563	DOWEL PIN .125 DIA X .4375
25	72555	O-RING URETHANE 70 DUR -016 (.614 ID)
26a	72658	BOLT (SILVER)
26b	72657	BOLT (SOFT-SHOT, RED)

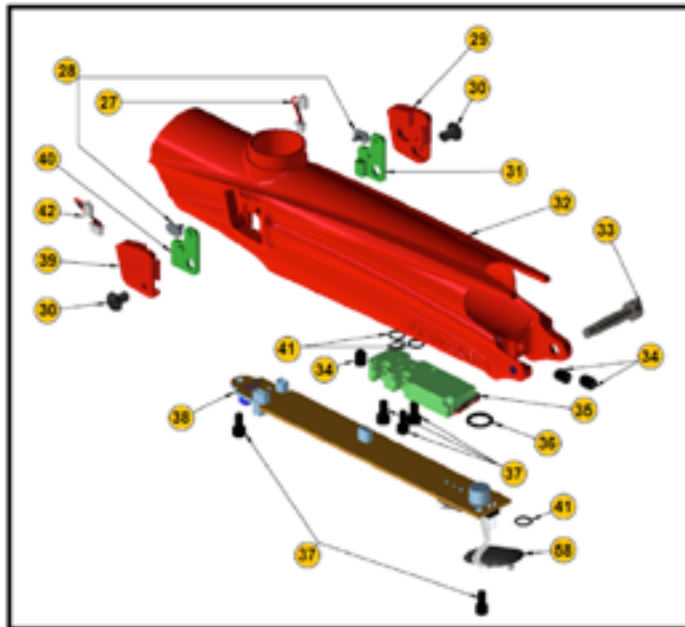


Diagram #	SKU	Part Description
BODY		
27	72574	HARNES BOARD EYES RH
28	72577	BALL DETENT RUBBER CONE
29	72579	COVER EYE RH - POLISH BLACK (16950)
30	72515	SCREW BHCS 8-32 X .250
31	72581	EYE BOARD RH
32	72583	BODY - DUST BLACK (16950)
33	72510	SCREW SHSS 3/16 DIA 3/4 LG 8-32 X .250
34	72513	SCREW SET 10-32 X .250 CP
35	72562	SOLENOID
36	72551	O-RING BUNA-N 70 DUR -011 (.301 ID)
37	72517	SCREW SHCS 5-40 X .250
38	72578	MAIN CIRCUITBOARD
39	72580	COVER EYE LH - POLISH BLACK (16950)
40	72582	EYE BOARD LH
41	72559	O-RING BUNA-N 70 DUR 1MM CS X 5MM ID
42	72575	HARNES BOARD EYES LH
58	72587	HARNES BATTERY

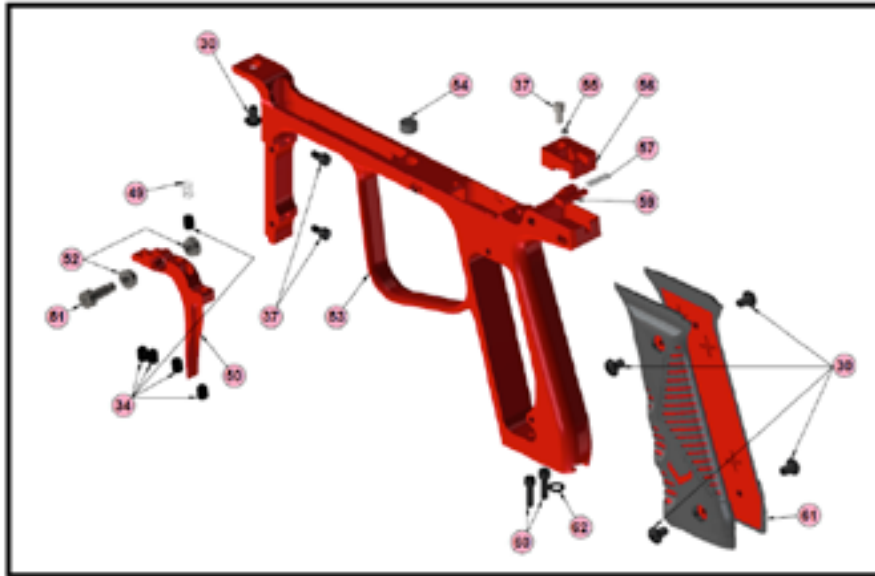


Diagram #	SKU	Part Description
GRIP FRAME		
30	72515	SCREW BHCS 8-32 X .250
37	72517	SCREW SHCS 5-40 X .250
51	72512	SCREW SHSS 3/16 DIA 3/8 LG 8-32 X .250
53	72588	GRIP FRAME - DUST BLACK (16950)
54	72576	MAGNET 8MM DIA .X 4MM
55	72585	BEARING BALL 1/8 DIA
56	72590	BLOCK RELEASE
57	72584	SPRING COM .120OD X 0.50FL .020WD RATE 18.LB/IN
59	72589	BUTTON RELEASE
60	72516	SCREW SHCS 5-40 X .438
61	72586	GRIP - BLACK/GREY (16950)
62	72550	O-RING BUNA-N 70 DUR -008 (.176 ID)
TRIGGER		
34	72513	SCREW SET 10-32 X .250 CP
49	72591	SPRING COM .184OD X .250FL .010WD RATE 0.78LB/IN
50	72594	TRIGGER - POLISH BLACK (16950)
52	72593	BEARING

Diagram #	SKU	Part Description
FOREGRIP		
43	72514	SCREW BHCS 8-32 X .375
44	72620	FOREGRIP CIRCUITBOARD
45	72618	FOREGRIP LH - BLACK/GREY (16950)
46	72619	FOREGRIP RH - BLACK/GREY (16950)
47	72617	SCREEN COVER
48	72616	BUTTON OLED

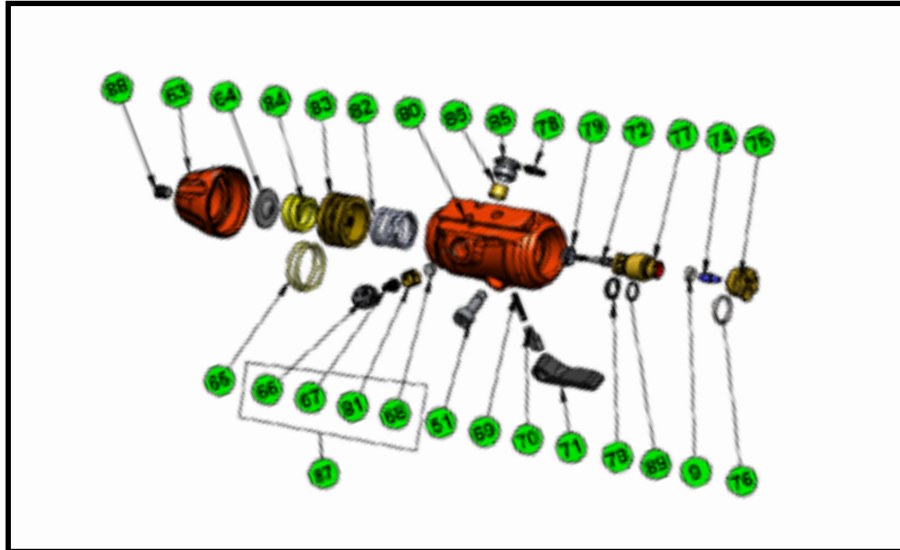


Diagram #	SKU	Part Description
REGULATOR		
9	72489	O-RING BUNA-N 70 DUR -006 (.114 ID)
88	72654	SCREW SET 10-32 X .375 CP
51	72512	SCREW SHSS 3/16 DIA 3/8 LG 8-32 X .250
63	72615	HP REGULATOR CAP - DUST BLACK
64	72609	REGULATOR DISK
65	40916	O-RING BUNA-N 70 DUR -017 (.676 ID)
66	72610	REGULATOR COVER PLATE
67	72604	REGULATOR OPP SPRING
68	72605	REGULATOR SEAL RUBBER
69	72597	WEDGE RETURN SPRING
70	72614	PIN WEDGE
71	72613	REGULATOR LEVER
72	72601	REGULATOR PIN
73	72603	RETAINER SEAL
74	72598	ON/OFF PIN
75	72599	REGULATOR NUT
76	72490	O-RING BUNA 70 DUR -012 (.364 ID)
77	72600	RETAINER PIN
78	72509	O-RING BUNA-N 70 DUR 1.5MM CS X 6.5MM ID
79	72602	PISTON WASHER
80	72612	HP REGULATOR BODY - DUST BLACK
81	72606	REGULATOR SEAL HOUSING
82	72607	PISTON RETURN SPRING
83	72611	PISTON
84	72608	MAIN REGULATOR SPRING
85	72595	REGULATOR FILTER CAP
86	72596	REGULATOR FILTER
87	17597	REGULATOR OPP (COMPLETE)
89	72546	O-RING BUNA-N 70 DUR 1.0MM CS X 6.0MM ID



Empire Paintball
11723 Lime Kiln Rd.
Neosho, MO 64850
www.empirepaintball.com
Empire Paintball is a brand of KEE Action Sports, LLC.

PATENT(S): See www.paintballsolutions.com/patents © 2012-2013 KEE Action Sports. All rights reserved. This KEE Action Sports product is protected by one or more United States patents. KEE Action Sports Trademarks, Designs and Copyrights are protected by one or more United States patents and International Law. For more information contact KEE Action Sports at info@keeactionsports.com

LIMITED LIFETIME WARRANTY INFORMATION (ORIGINAL PURCHASE RECEIPT REQUIRED)

KEE Action Sports ("KEE") warrants that this product is free from defects in materials and workmanship for as long as it is owned by the original purchaser, subject to the terms and conditions set forth below. KEE Action Sports will repair or replace with the same or equivalent model, without charge, any of its products that have failed in normal use because of a defect in material or workmanship.

KEE Action Sports is dedicated to providing you with products of the highest quality and the industry's best product support available for satisfactory play.

Purchaser should register product to activate warranty. Register your product by:

1. Online at www.paintballsolutions.com
2. Complete the product registration card (if applicable) and mail along with a copy of your receipt to Paintball Solutions, 11723 Lime Kiln Rd., Neosho, MO 64850.



WHAT THIS WARRANTY DOES NOT COVER

This warranty does not cover problems resulting from abuse, the unauthorized modification or alteration of our product, problems resulting from the addition of aftermarket products and scratches or minor superficial imperfections. Due to the nature of paintball products it is important that the product be maintained by the user as indicated in the product manual to remain in good operating condition. Your Limited Lifetime Warranty will be void if you fail to maintain the product as recommended in the product instruction manual. In addition, certain parts of a product may be subject to wear through regular usage. Replacement and repair of such parts is the responsibility of the user throughout the life of the product. These parts are not covered under the Limited Warranty. Examples of this type of part include (but are not limited to) goggle lens, straps, O-Ring seals, cup seals, springs, ball détentes, batteries, hoses, drive belts, gears and any part of a product subject to continuous impact from paintballs. Hydrotesting of air cylinders is not covered under this warranty.

The Limited Lifetime Warranty also does not cover incidental or consequential damages. This warranty is the sole written warranty on KEE's product and limits any implied warranty to the period that the product is owned by the original purchaser. Some states, provinces and nations do not allow the limitation of implied warranties or of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state, province to province, nation to nation. If you should encounter any problems with your product and you have added aftermarket parts on your product, please test it with the original stock parts before sending it in. Always unload and remove air supply before shipping markers. Do not ship your air supply tank if it is not completely empty. Shipping a pressurized air supply tank is unsafe and unlawful. Remove all batteries from products prior to shipping. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages.

For Warranty parts, service, information or manuals in other languages, (where applicable) go to Paintball Solutions: www.paintballsolutions.com

E-Mail: tech@paintballsolutions.com

US: 1-800-220-3222

Canada: 866-685-0030

11723 Lime Kiln Rd., Neosho, MO 64850





EMPIREPAINTBALL.COM
11723 Lime Kiln Rd, Neosho, MO 64850
800-220-3222

Empire Paintball is a brand of KEE Action Sports, LLC.