

PT JR.

PT Jr. Schematic



NPS EXCLUSIVE PARTS



Order schematics parts online at www.paintballsolutions.com or call 1-800-220-3222

PT Jr. Parts List

- | | | |
|------------------------|-----------------------------|----------------------------|
| 1. Hammer | 16. Multi-Use O-Ring | 28. Sear Spring |
| 2. Main Spring | 17. Wrap Around Grip Panels | 29. Valve Face Seal O-Ring |
| 3. Recoil Pad | 18. Grip Panel Screws | 30. Grip Frame Pin Set |
| 4. Velocity Adjuster | 19. 12 Gram Plug | 31. Trigger Spring |
| 5. Air Plate Screws | 20. Valve Face | 32. Trigger Guard |
| 6. Valve Stop Pin | A. Pressure Spring | 33. Trigger Guard Screw |
| 7. Gas Valve | B. Piercing Pin | 34. Spring Strut |
| 8. Cupseal | C. Valve Cap | 35. Hammer Plug |
| 9. Valve Spring | 21. Ball Detent Cover | 36. Hex Nut |
| 10. Valve Gas Plug | 22. Grip Frame | |
| 11. Gasket | 23. Main Body | |
| 12. Air Transfer Plate | 24. Grip Frame Screws | |
| 13. Quick Release Pin | 25. Safety Assembly | |
| 14. Bolt | 26. Trigger Plate | |
| A. Connecting Pin | 27. Sear | |
| 15. Rubber Ball Detent | | |



PT Jr.